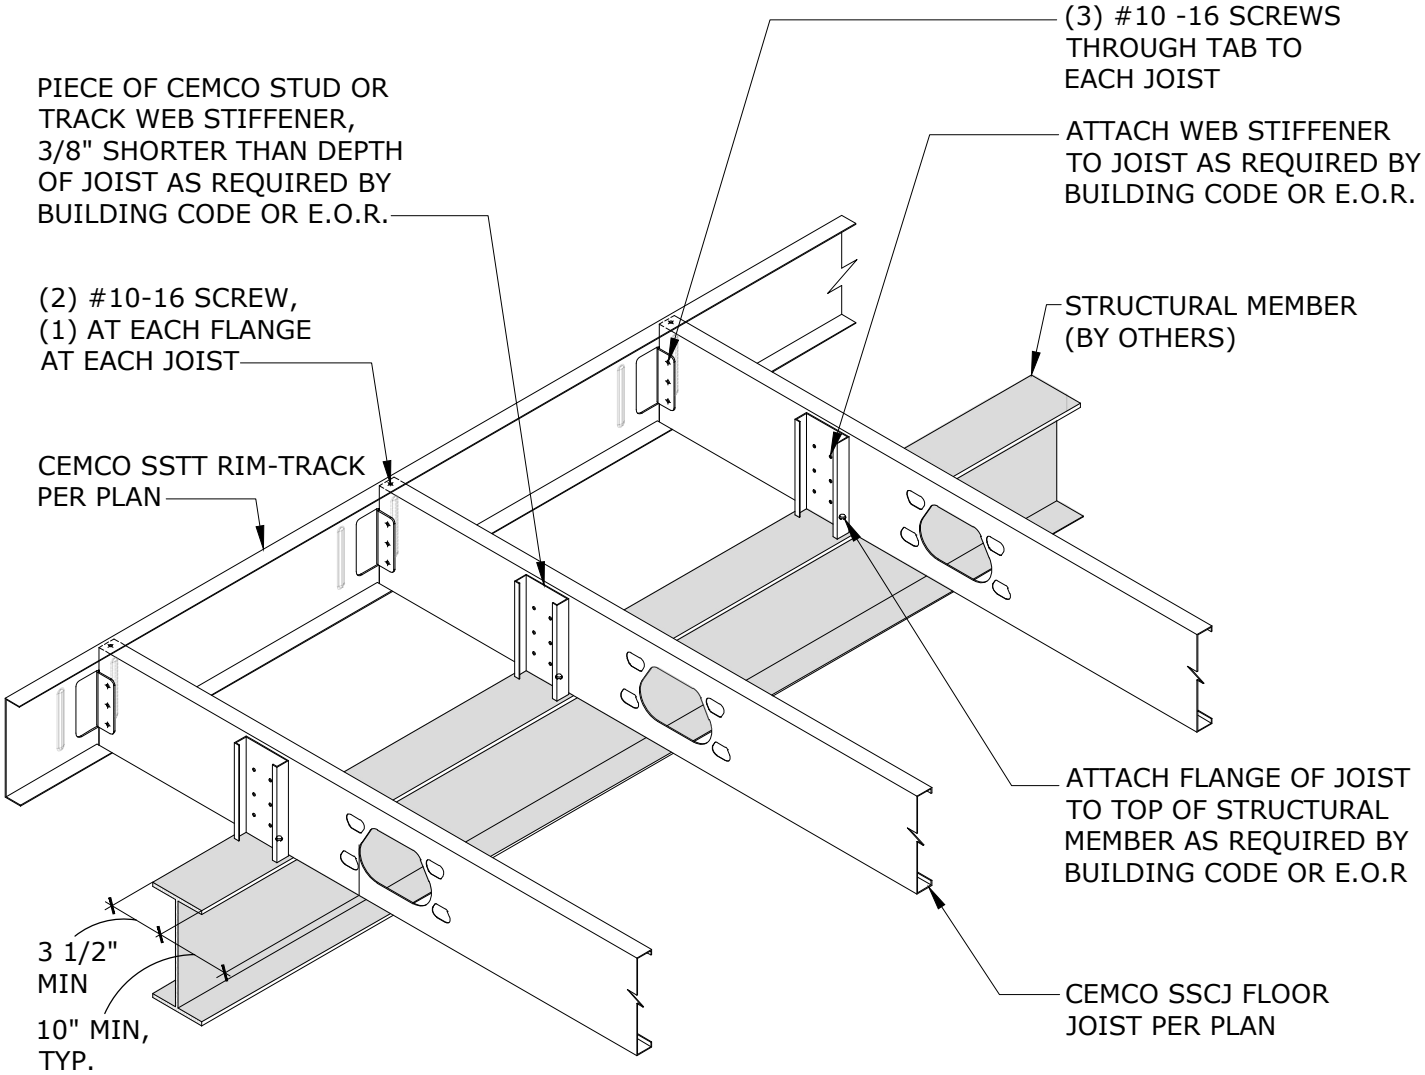
(3) #10 -16 SCREWS THROUGH TAB TO EACH JOIST
PIECE OF CEMCO STUD OR TRACK WEB STIFFENER, 3/8" SHORTER THAN DEPTH OF JOIST AS REQUIRED BY BUILDING CODE OR E.O.R.
ATTACH WEB STIFFENER TO JOIST AS REQUIRED BY BUILDING CODE OR E.O.R.
(2) #10-16 SCREW, (1) AT EACH FLANGE AT EACH JOIST
STRUCTURAL MEMBER (BY OTHERS)
CEMCO SSTT RIM-TRACK PER PLAN
ATTACH FLANGE OF JOIST TO TOP OF STRUCTURAL MEMBER AS REQUIRED BY BUILDING CODE OR E.O.R
3 1/2" MIN
10" MIN, TYP.
CEMCO SSCJ FLOOR JOIST PER PLAN